 




SUBMERSIBLE[†] LED PUCK LIGHT KIT with remote control

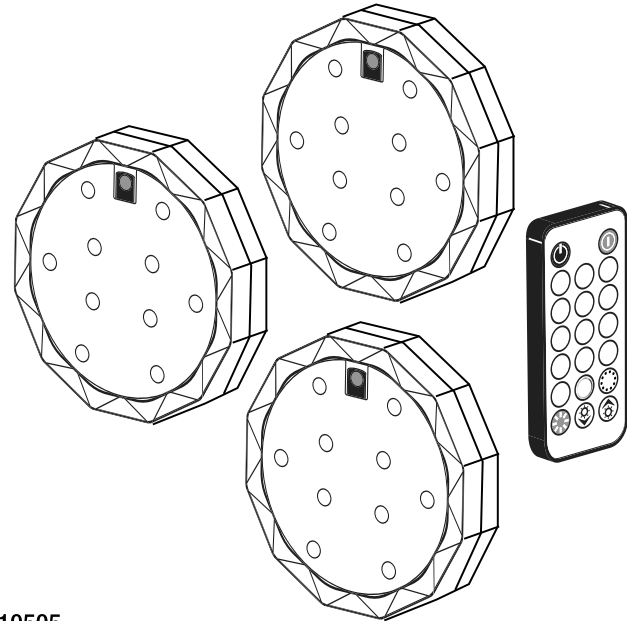


MODEL # 30310505
ITEM # 15805

SPECIFICATIONS

SUBMERSIBLE 1.5 m (5 ft)	REMOTE CONTROL RANGE 8 m (27 ft)		
	SIZE 75 mm (3 in) diameter	BATTERY REQUIREMENTS 3 x AA Alkaline (puck light) 1 x CR2025 (remote control)	VOLTAGE 4.5 V (puck light)

 PARTS INCLUDED

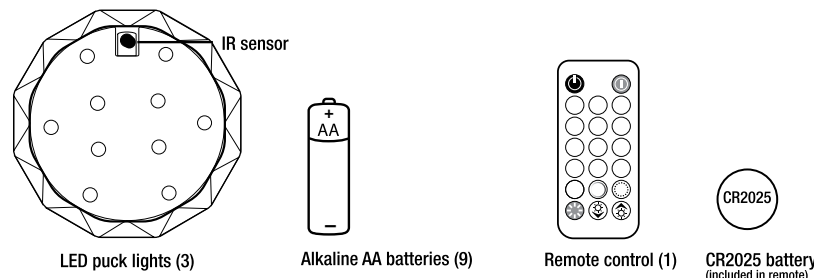

**PLEASE READ ALL INSTRUCTIONS
BEFORE USING YOUR NEW PUCK LIGHTS.**

Thank you for purchasing this Sunbeam® Submersible[†]
LED puck light kit with remote control.

SAVE THESE INSTRUCTIONS

BATTERY INSTRUCTIONS

Always purchase the correct size and grade of battery most suitable for the intended use. Do not mix old and new batteries. Ensure the batteries are installed correctly with regard to polarity (+ and -). Remove used batteries from equipment which is not to be used for an extended period of time.

- 1 To insert batteries in puck light, flip the puck upside down and turn the cover counterclockwise to open the battery compartment. (FIG. 1)
- 2 Insert batteries provided correctly in regard to polarity (+ and -). (FIG. 2)
- 3 Replace cover and turn clockwise ensuring that it is closed tightly and securely. (FIG. 3)

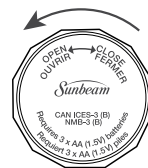


FIG. 1

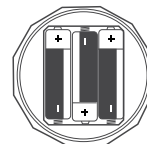


FIG. 2

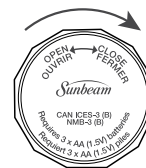


FIG. 3

OPERATION

- 1 Select the desired location.*
- 2 Select the desired setting.
A - A DIFFERENT SETTING FOR EACH PUCK
To set each puck light to a different lighting effect, ensure that the pucks are at least 0.6 m (2 ft) apart and point the remote control directly at the puck you wish to set. (FIG. 4)
or
B - THE SAME SETTING FOR ALL 3 PUCKS
To set all 3 pucks to the same lighting effect, place the pucks close together in a group. The distance between them should be less than 0.6 m (2 ft). (FIG. 5)

FIG. 4



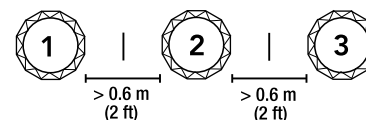


FIG. 5

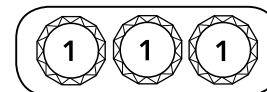

- 3 Point the remote control towards the IR SENSOR (at the top of puck light) for better signal reception press the ON button to activate the light. (FIG. 6)
- 4 Select your colour setting.
A - SINGLE COLOUR - DIMMABLE
Press one of the 12 colour or white buttons to select the light colour of your choice. Adjust the light intensity by increasing or decreasing the brightness using the remote control.
or
B - COLOR CHANGING - NON-DIMMABLE
a - Press the fade function to change the LED colours gradually.
or
b - Press the jump function to change the LED colours in sequence.
- 5 To modify settings, press the reset function and redo steps 2 to 4.

FIG. 6

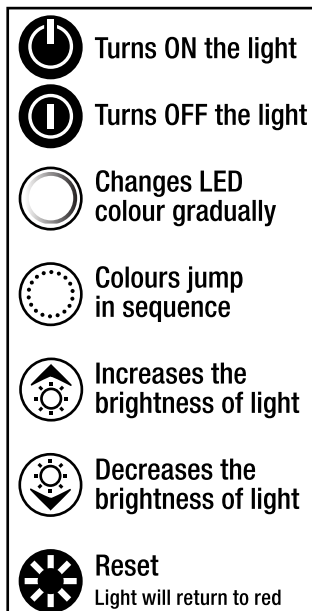

BATTERY REPLACEMENT


TO REPLACE BATTERIES IN PUCK LIGHTS

Refer to Battery Instructions.
(FIG. 1, 2 and 3)



TO REPLACE BATTERY IN REMOTE CONTROL

- 1 On the back of the remote push the small square lever towards the center of the remote and pull out the battery compartment. (FIG. 7)
- 2 Insert CR2025 3V Lithium battery into the slot, + polarity facing upwards. (FIG. 8)
- 3 Insert battery compartment back into the remote control. (FIG. 9)

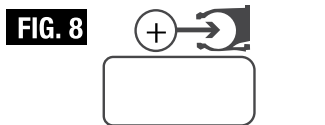

IMPORTANT NOTICE

SUITABLE FOR WET LOCATIONS

TO AVOID THE RISK OF WATER INFILTRATION, ENSURE THAT PUCKS ARE CLOSED TIGHTLY AND SECURELY

WARNING

THIS IS NOT A TOY. NOT INTENDED FOR SMALL CHILDREN
DO NOT USE IF BATTERY COMPARTMENT IS BROKEN OR DAMAGED
DO NOT LEAVE PUCKS IMMERSED IN WATER FOR AN EXTENDED PERIOD OF TIME IF NOT IN USE

CAUTION

DO NOT IMMERSE THE PUCKS IN WATER TEMPERATURES ABOVE 40°C (104°F)
DO NOT SUBMERGE REMOTE CONTROL

[†] DO NOT SUBMERGE THE PUCK IN WATER DEEPER THAN 1.5 M (5 FT)

* When submerging pucks in water deeper than 0.5 m (1.5 ft), you will need to set the desired light effect prior to immersing the pucks in the water as the functionality of the remote may be affected by water depth.

When using the puck inside a dark or walled area (i.e. inside of an opaque vase), set the desired light effect prior to placing the puck inside the object as the remote control will not be able to detect the sensor.

BATTERY WARNING: Keep away from small children. Do not ingest. Seek immediate medical attention if swallowed. Do not insert backwards, recharge, mix with other battery types, or dispose of in fire – may explode or leak and cause personal injury. Replace all batteries at the same time. Do not carry loose batteries in pockets, purses or bags. Recycle or dispose of properly according to your local municipality and provincial regulations.

This device complies with ICES-003 of the IC rules; operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

If you encounter any problems, please do not return to the store.
Please contact our customer service toll free line at
1-877-383-6399 (8:30 am – 17:30 pm E.S.T.) Monday - Friday

LIMITED WARRANTY: This product is guaranteed to operate a minimum of 1 year from the original date of purchase. If, under normal use and for the full time period, your product fails to operate, please return it to: Quality Control Dept., L'Image Home Products Inc., 1175 Place du Frère-André, Montreal, Quebec, Canada H3B 3X9 (with your original proof of purchase receipt) and we will refund it. This warranty is considered void if the product fails from misuse.

© 2015 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved SUNBEAM® logo is a registered trademark of Sunbeam Products, Inc. used under license. Distributed by L'Image Home Products Inc., Montreal, Canada H3B 3X9. LHP979-082615

To download this instruction manual, visit the product page on our website:
www.limagehomeproducts.ca